



50KTWS3

TRUE WIRELESS HYBRID ACTIVE NOISE
CANCELLING EARBUDS

 
AUDÍFONOS HÍBRIDOS VERDADERAMENTE
INALÁMBRICOS CON CANCELACIÓN ACTIVA DE
RUIDO

select language

seleccione el idioma

choisir la langue

sprache auswählen

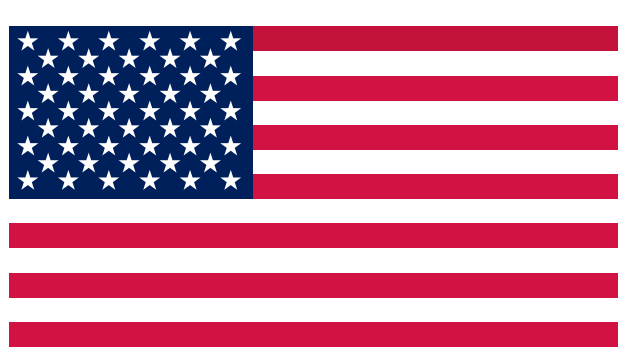

Contents

Overview	2
WARNING	3
What's in the Box.....	4
Specifications	5
Charging	6
Charging the Case	6
Charging the Earbuds	7
Fitment.....	8
Pairing and Connecting...	9
Controls and Operations	10
Basic Controls.....	10
ANC Modes	11
Resetting the Earbuds	12
Troubleshooting	13
Warranty	16

Overview

The TWS3 earbuds feature advanced Bluetooth® technology for seamless wireless connectivity, touch controls for easy operation, and a compact charging case for on-the-go power. Key features include:

Audio Quality: Crystal-clear sound with deep bass and balanced highs.

Noise Management: Active Noise Cancellation (ANC) to block out external noise, Transparency mode to stay aware of your surroundings, and Environmental Noise Cancellation (ENC) for clearer calls.

Battery Life: Up to 5 hours of playback on a single charge (with ANC off), extendable to 24 hours with the charging case.

Connectivity: Bluetooth 5.3 for stable pairing with smartphones, tablets, and other devices.

Design: Ergonomic fit with IPX4 water resistance for sweat and rain protection.

WARNING

Exposure to excessive sound levels can cause permanent hearing damage. Keep out of reach of children. The content of this package includes small parts and cords that can cause choking or strangulation. If an earbud or earbud tip becomes lodged in the ear canal, seek professional medical assistance for its removal. Use a low twisting motion to remove from ear.

This product contains built-in batteries. Do not expose to direct sunlight, fire, or extreme heat. Store in a cool, dry place away from strong light, magnets, or fire hazards.

If water enters the earbuds, allow them to dry naturally before use. Do not use heat sources like hair dryers.

Improper use may damage the product or pose risks to personal and property safety.

Consumers are responsible for any consequences from misuse. Our company assumes no liability for personal injury, property damage, or legal issues arising from non-compliance.

Do not disassemble, modify, or repair the product yourself—only authorized professionals should handle this.

Avoid overloading: Do not connect charging case to devices exceeding the rated power.

Prevent physical damage: Do not knock, throw, trample, squeeze, or subject to strong impacts.

Use only the provided accessories to avoid compatibility issues.

Keep away from children to prevent choking hazards from small parts.

If you experience discomfort (e.g., ear irritation), discontinue use and consult a physician.

FCC CAUTION

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

FCC RF EXPOSURE WARNING STATEMENT:

THIS EQUIPMENT COMPLIES WITH FCC RADIATION EXPOSURE LIMITS SET FORTH FOR AN UNCONTROLLED ENVIRONMENT. THIS EQUIPMENT CAN BE USED IN PORTABLE EXPOSURE CONDITIONS.

NOTE: THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT GENERATES USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION. IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES:

-REORIENT OR RELOCATE THE RECEIVING ANTENNA.

-INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER.

-CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.

-CONSULT THE DEALER OR AN EXPERIENCED RADIO/TV TECHNICIAN FOR HELP.

FCC ID: RGR-KTWS3

 **stillwaterdesigns**

 
Stillwater Designs
3100 North Husband St
Stillwater, OK 74075
+1 (405) 624-8510



50KTWS3-20260119-C

What's in the Box


TWS3 Left and Right Earbuds

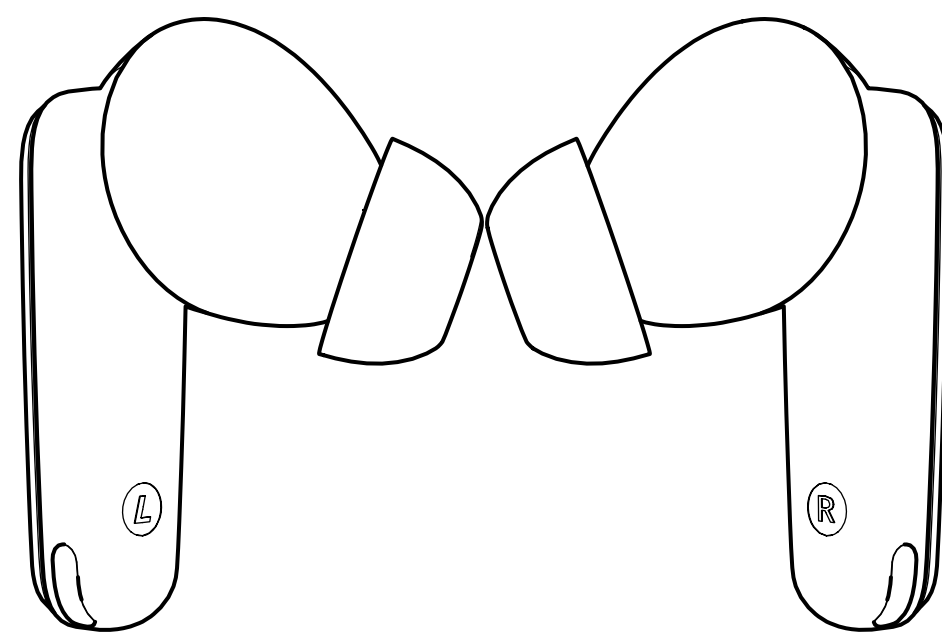


Charging Case



 
USB-C Charging Cable

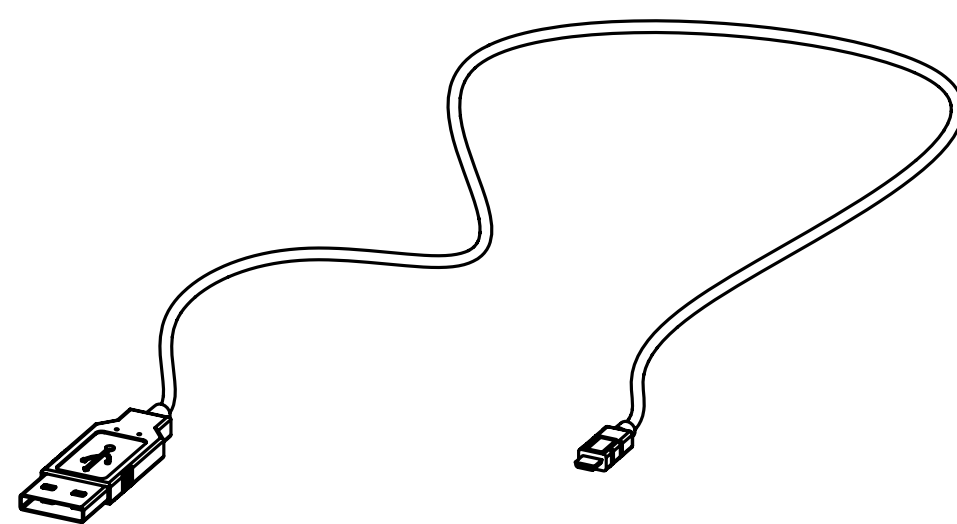

 Replacement Ear Tips
(Small, Medium, Large)

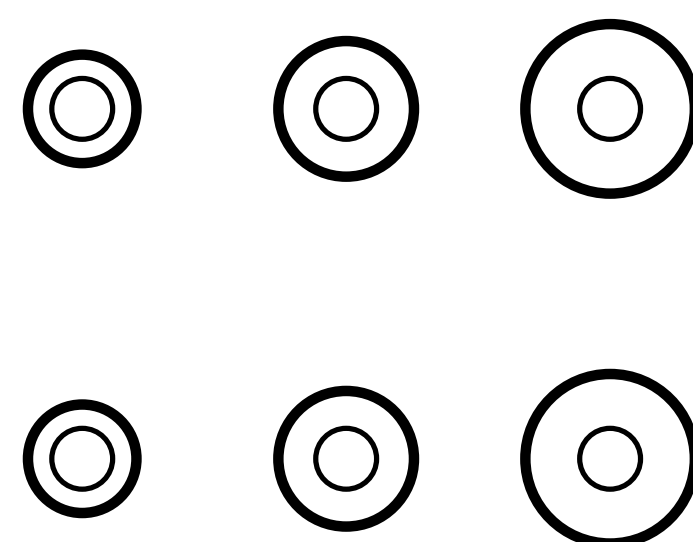

Quick Start Guide

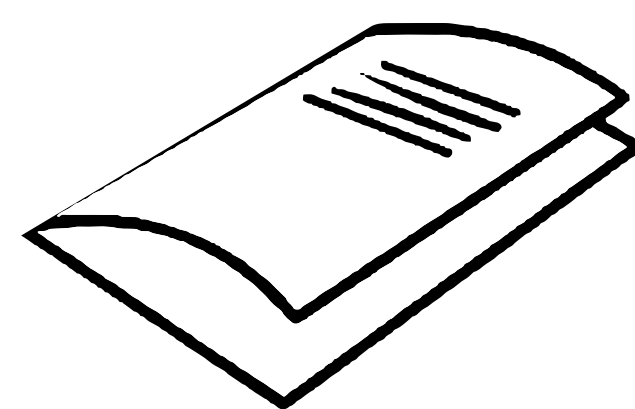 

If any items are missing or damaged, please contact customer support immediately.

Specifications

Frequency Response	20Hz–20kHz
Play Time	5 Hours
Charging Case Charge Time	2 Hours
Earbud Charge Time	1 Hour
Charging Case Battery Capacity	470 mAh
Charging Interface	USB-C
Earbud Battery Capacity	30 mAh
Earbud Rated Input	60 mA - 2C fast charging
Bluetooth Version	5.3
Bluetooth Profiles	A2DP/AVRCP/HFP
Bluetooth Codecs	AAC/SBC
Bluetooth Distance	≤10 m

 
Charging

Proper charging ensures optimal performance and longevity of your earbuds. Charge the case fully before first use.

Charging the Case

Connect the included USB-C cable to the charging port on the bottom of the case.

Plug the other end into a compatible 5V power source (e.g., a wall adapter, computer USB port, or power bank).

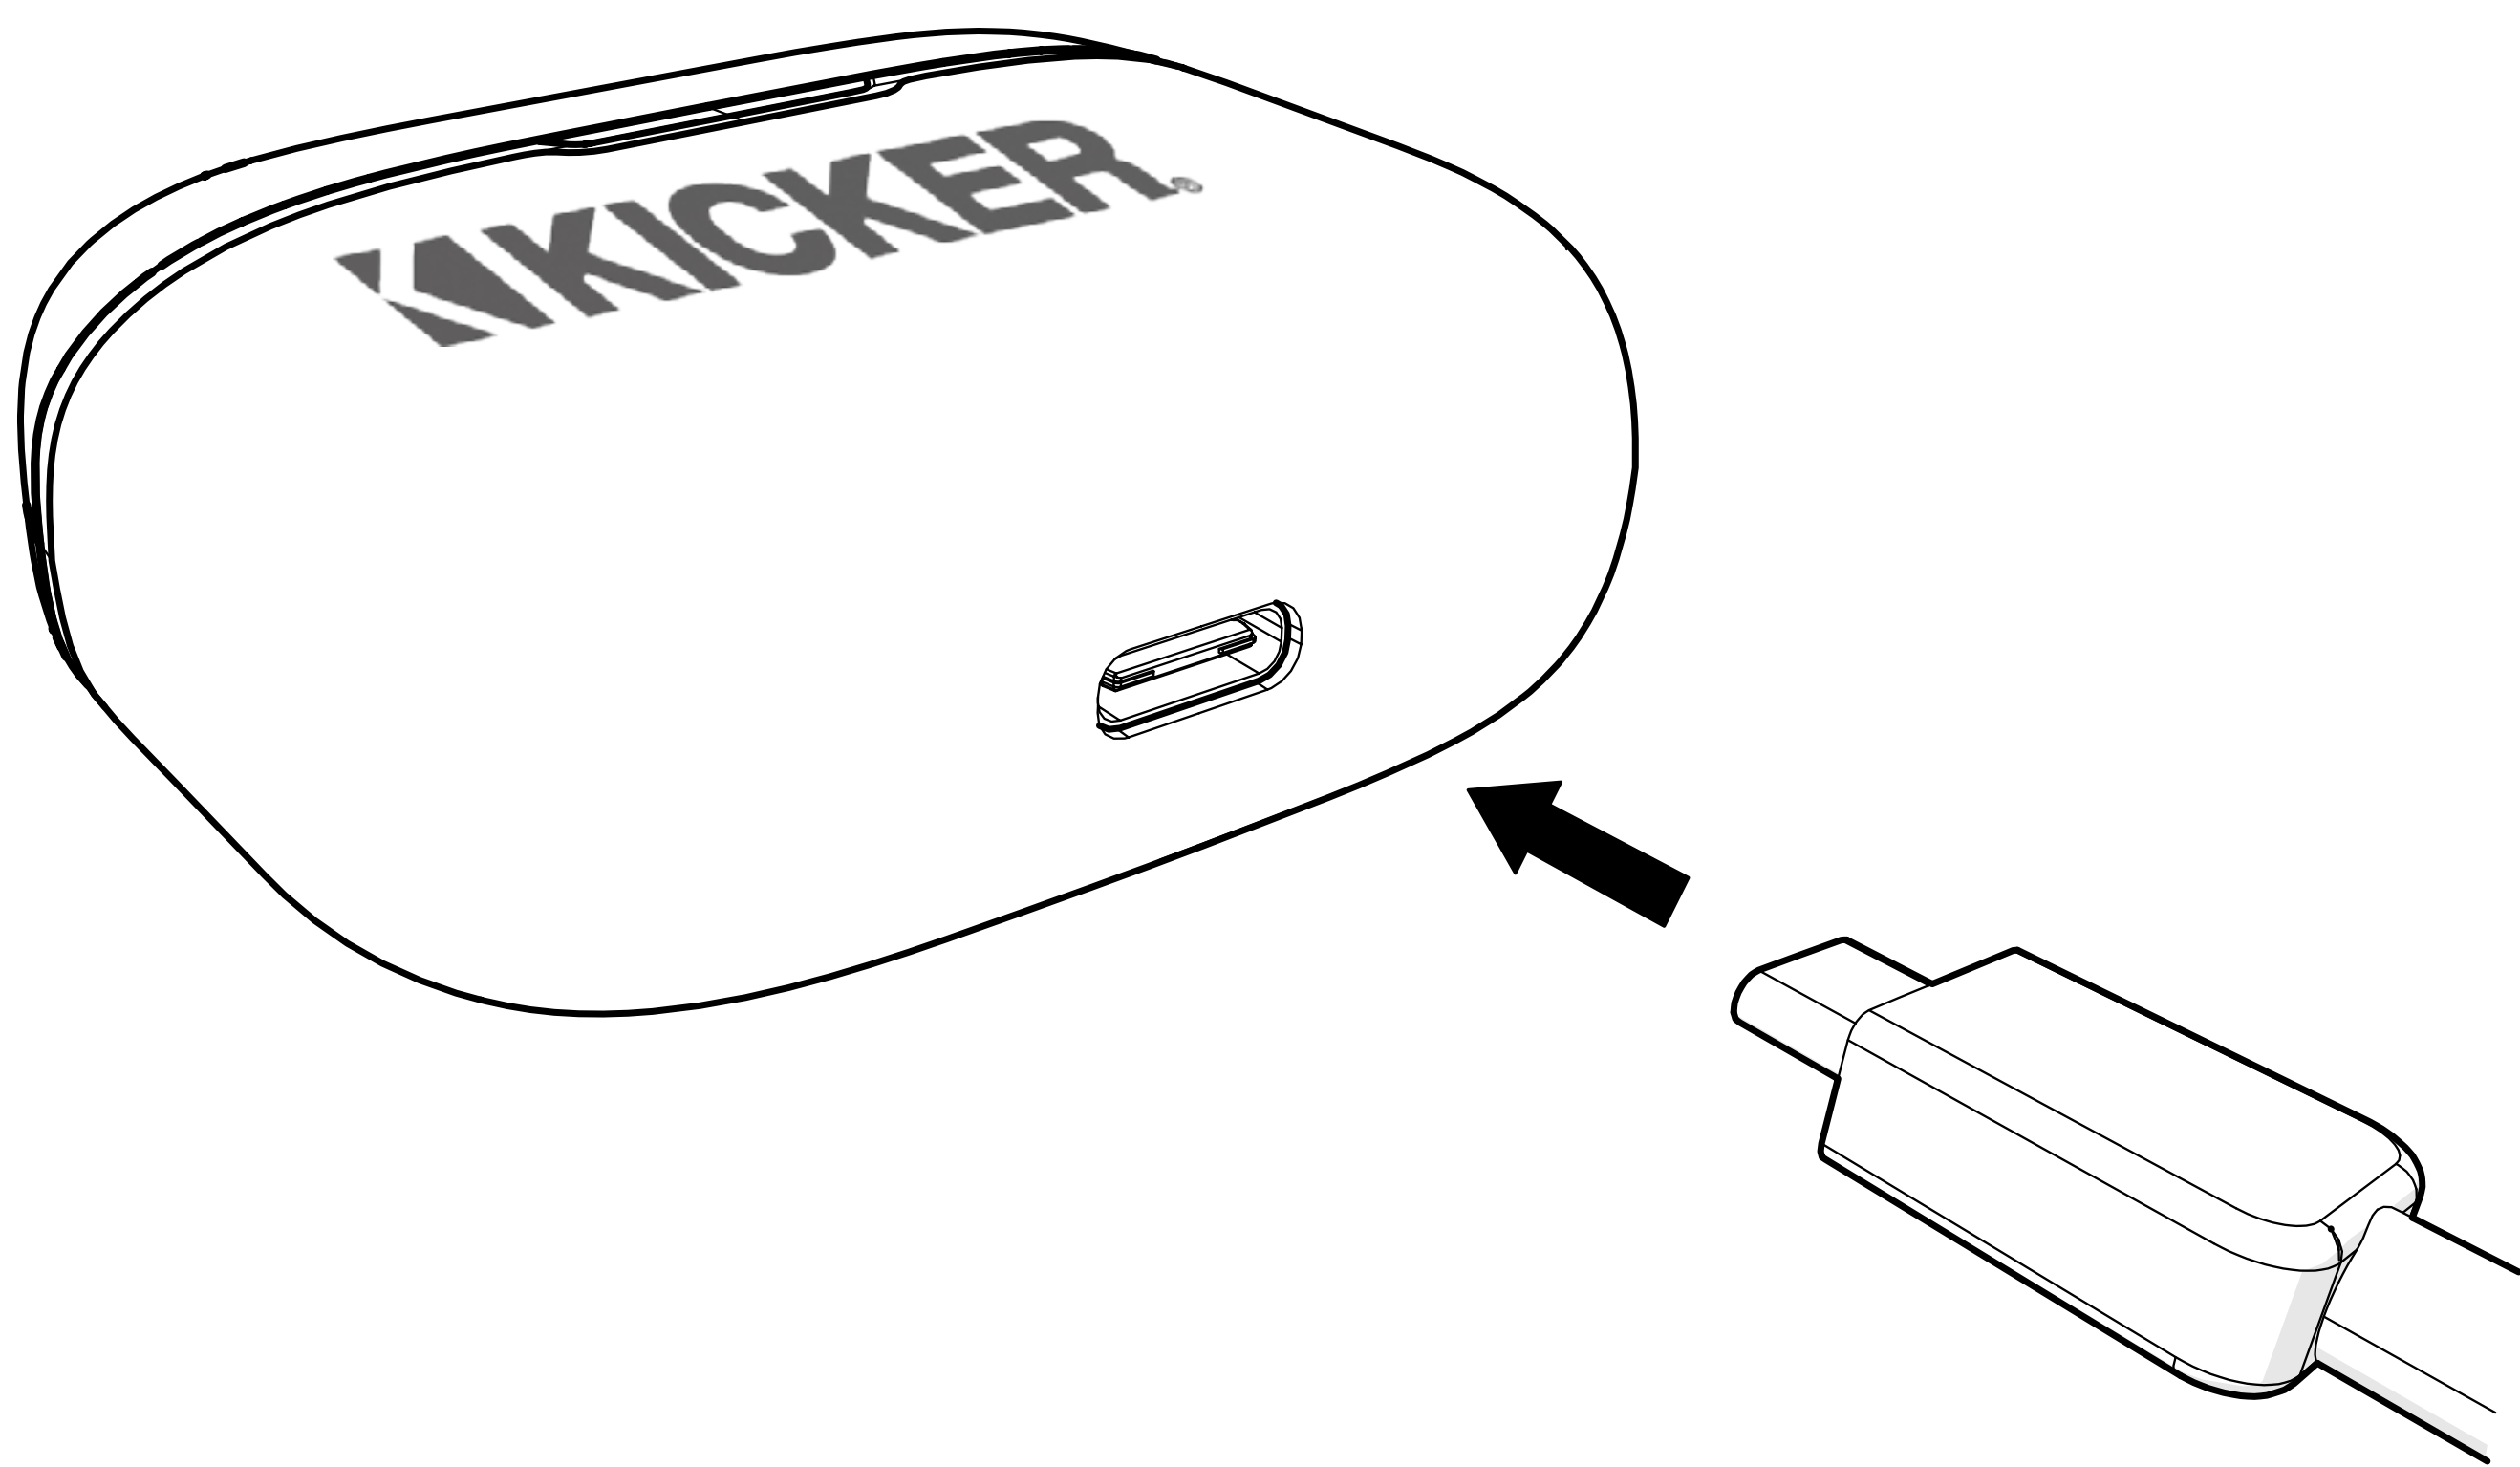

During Charging: The red light on the charging case will flash, showing that the case is receiving power.

 
Fully Charged: The red light will remain on, indicating the case is fully charged and ready for use.

Avoid extreme temperatures during charging (ideal range: 0°C to 45°C or 32°F to 113°F). If the case battery is low, it may take up to 2 hours to fully charge.

Charging the Earbuds

If the battery is low, the Status LED will slowly blink red.


Place the earbuds into the Charging Case, ensuring they are oriented and seated correctly.

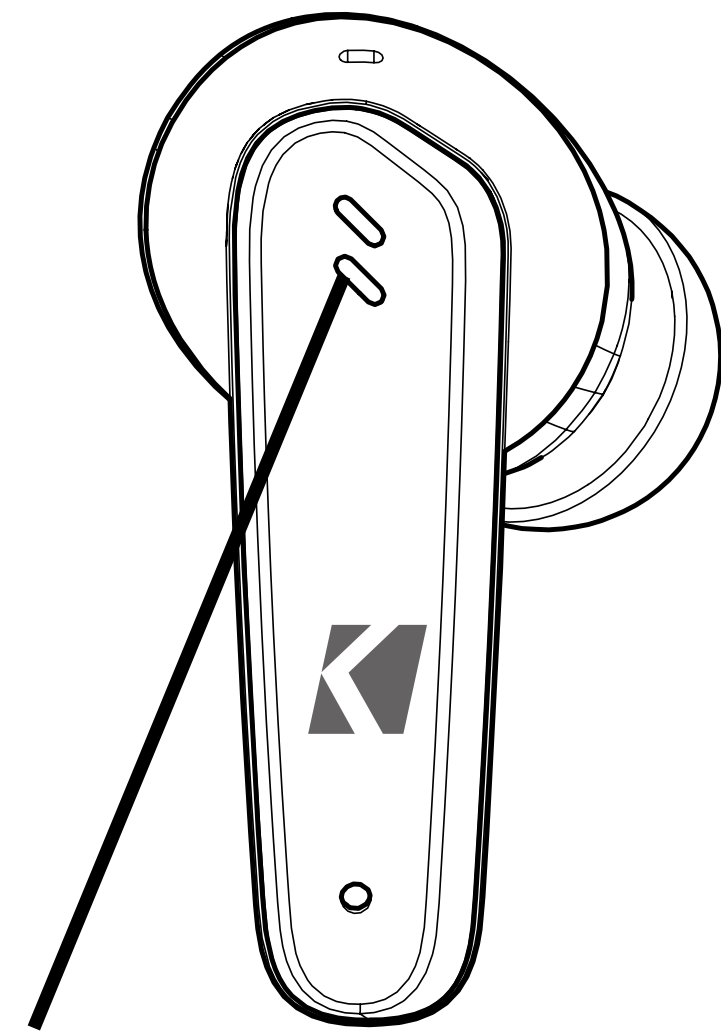

Battery Status Light

Close the case lid. The earbuds will automatically begin charging if the case has sufficient power.

 
Note: Always use the provided charging case to charge the earbuds, as it is specifically designed for safe and efficient power delivery.

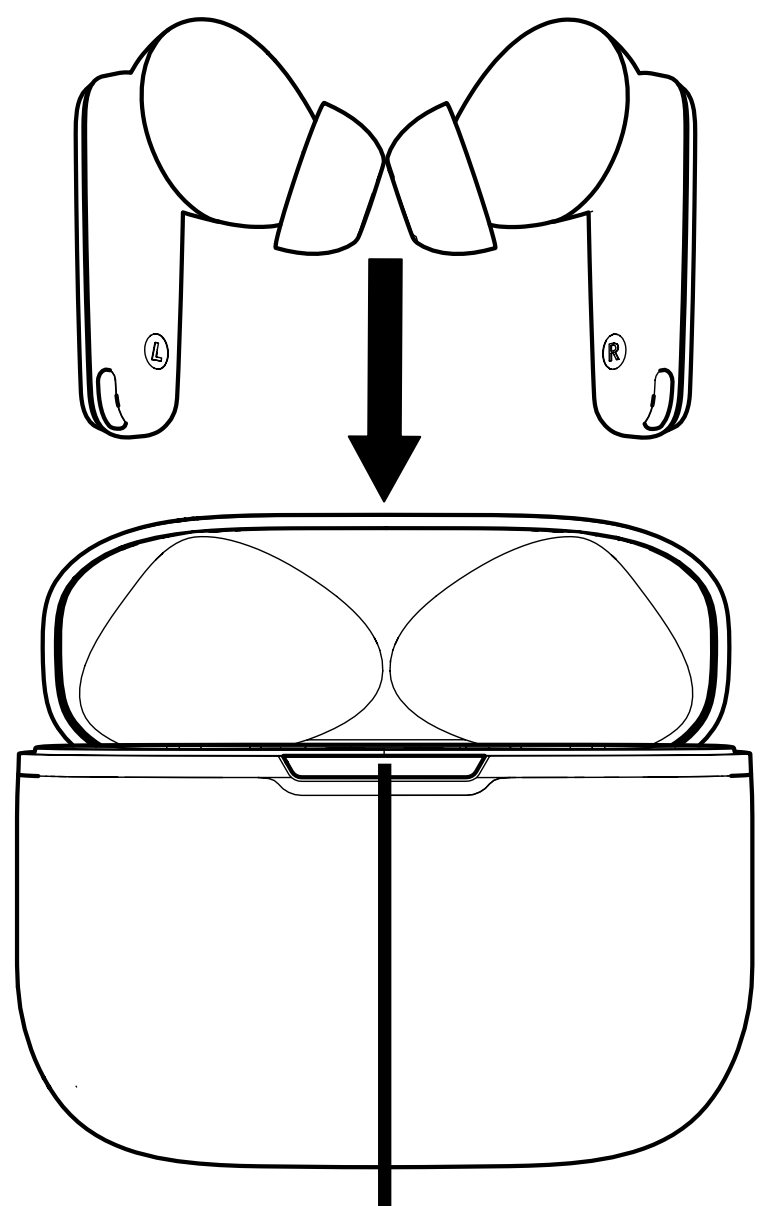


Charging Light

Fitment

 
Insert earbud, and gently turn while pushing. If fitment is unsatisfactory, please try a different ear tip.

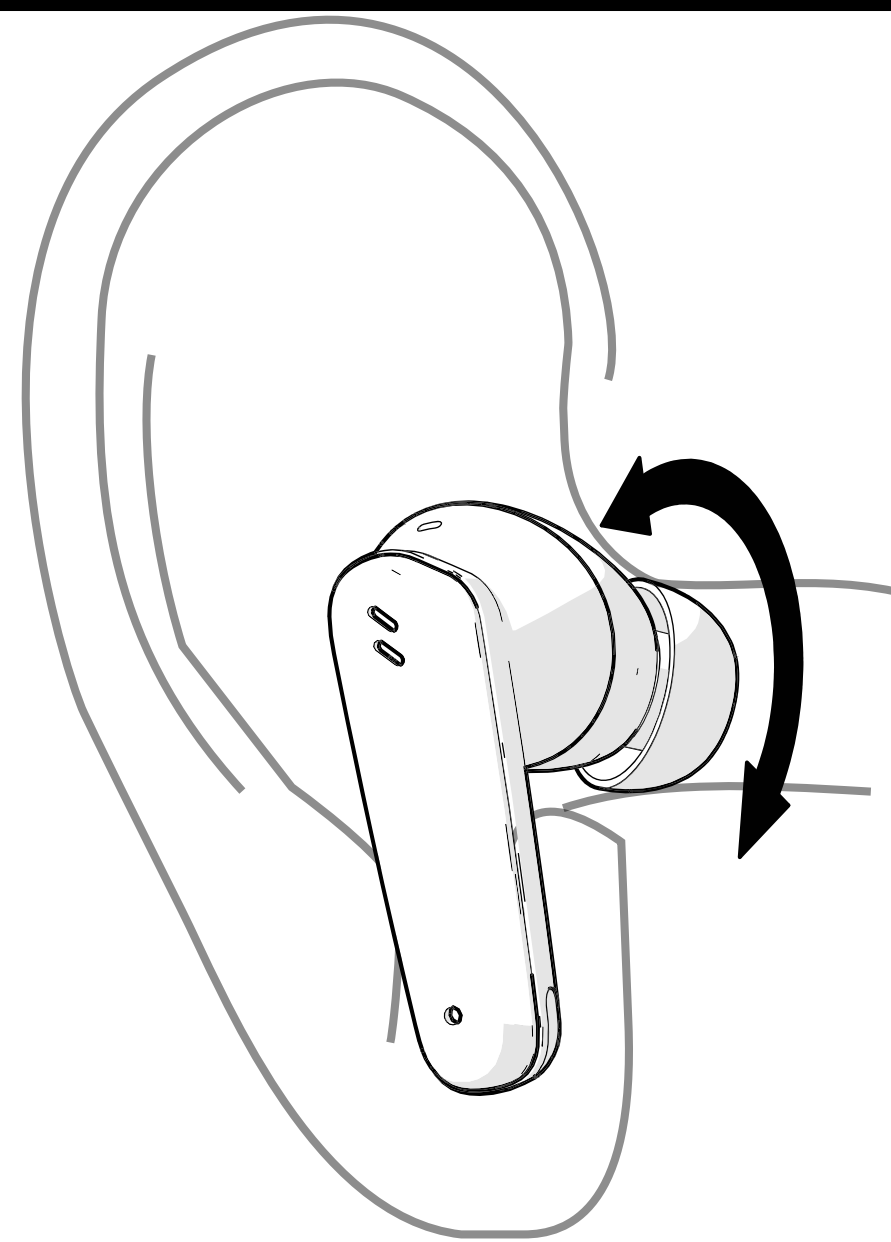

Squeeze and twist to remove tip.

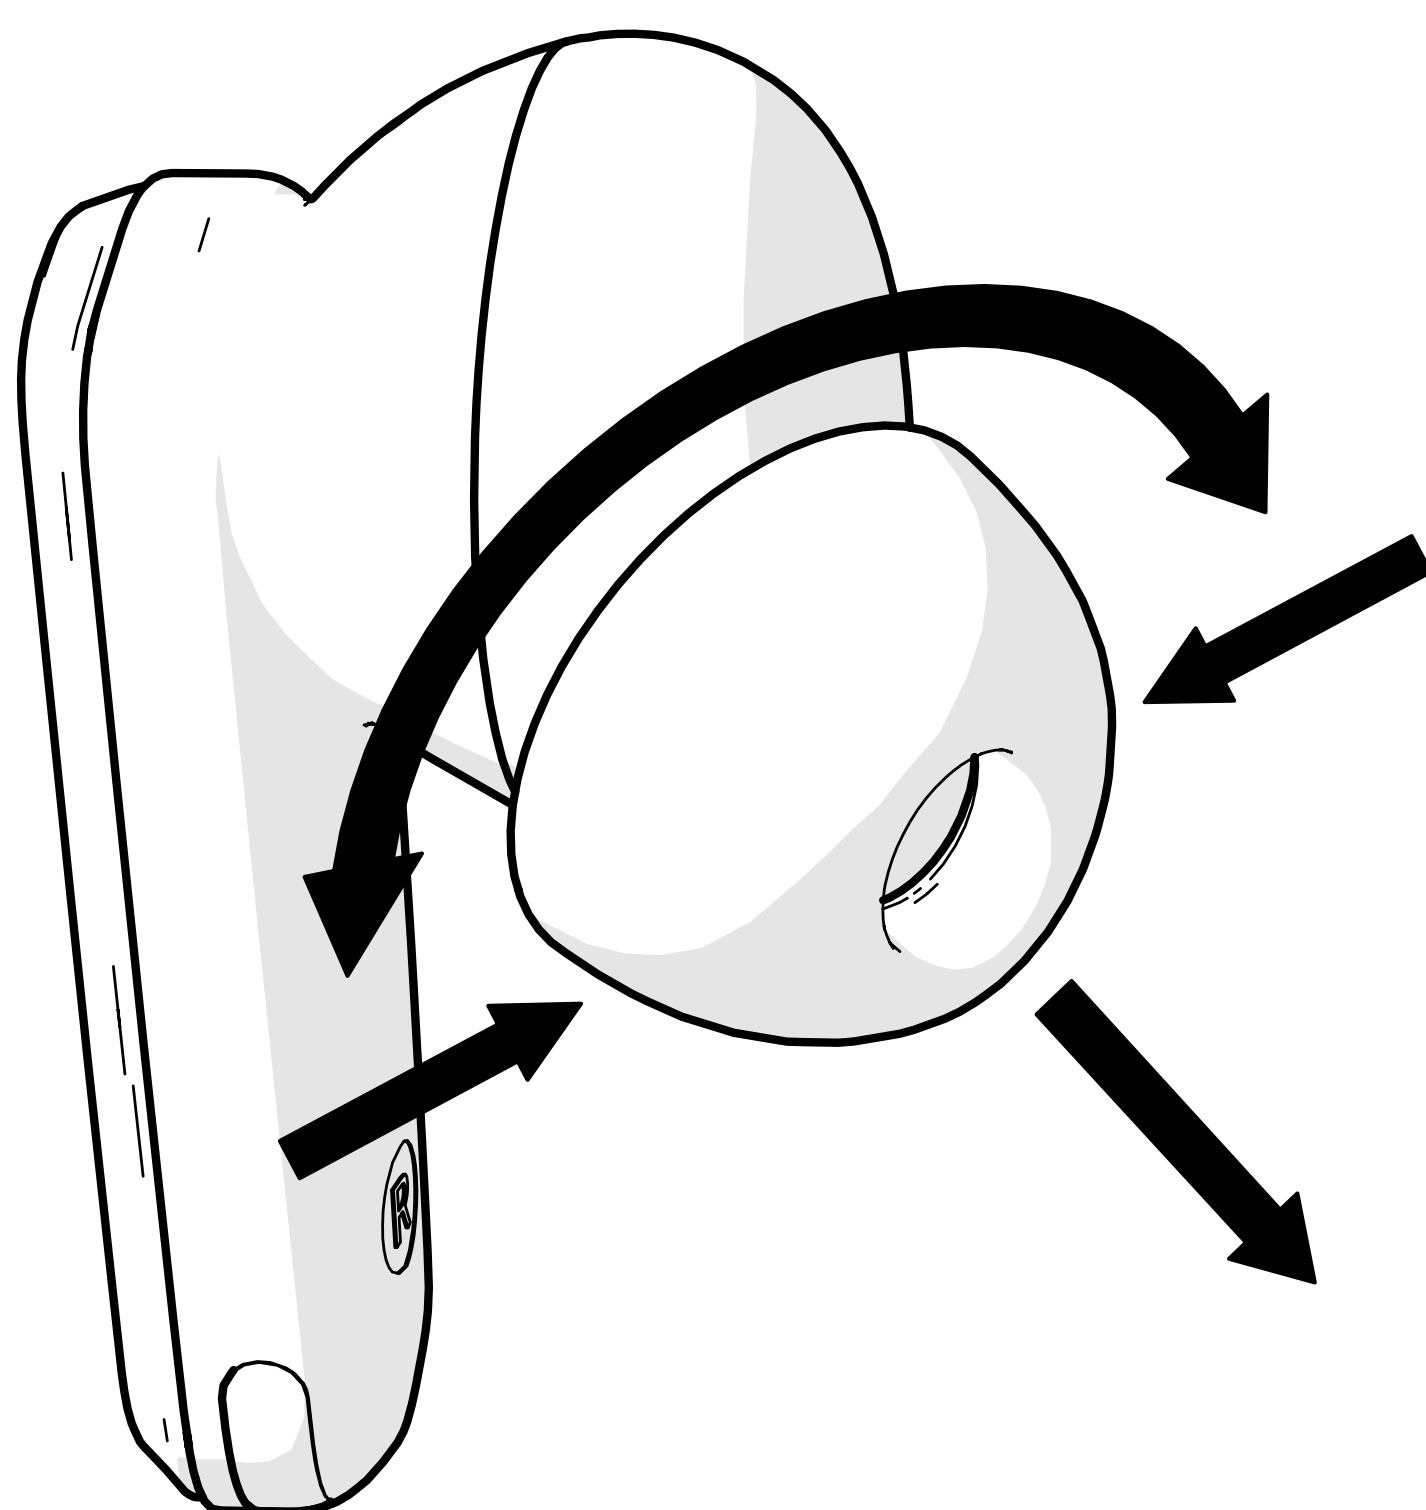 

 
Perform the same action when replacing the tip.

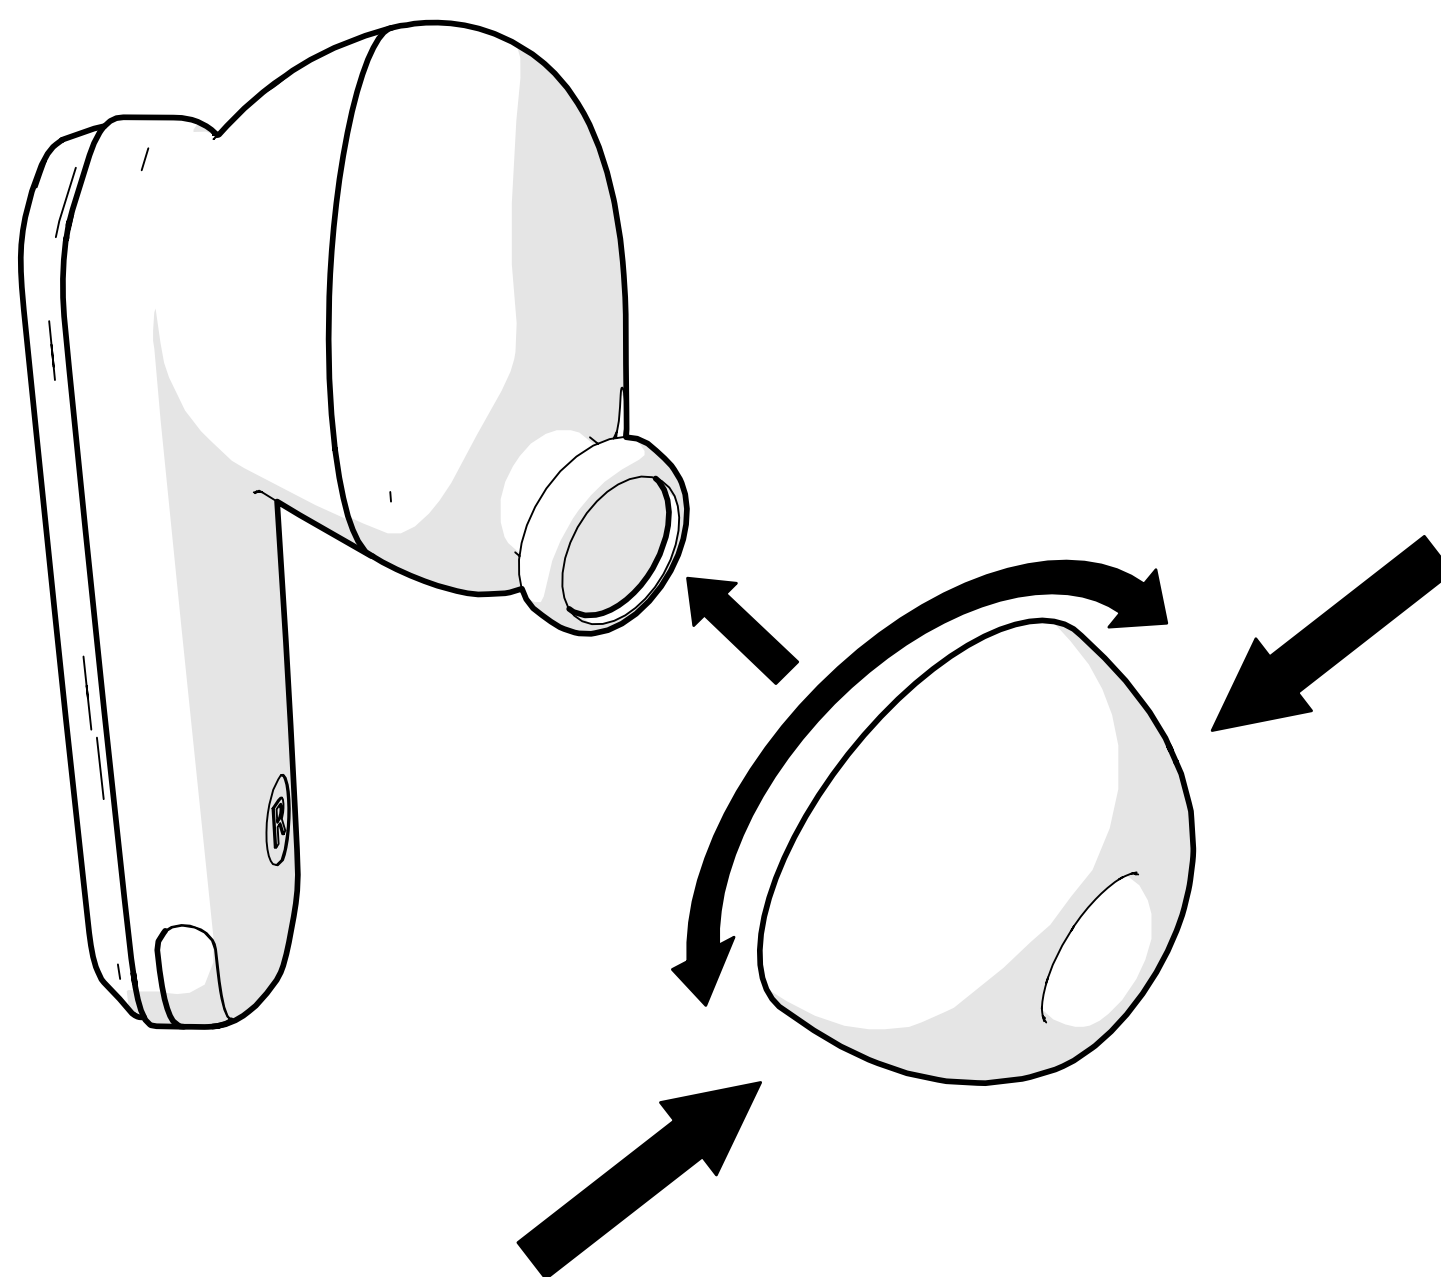

Pairing and Connecting

The TWS3 earbuds support quick Bluetooth pairing for a hassle-free setup.

 Initial Pairing: Open the charging case lid with the earbuds inside. The earbuds will automatically enter pairing mode, indicated by flashing white lights.

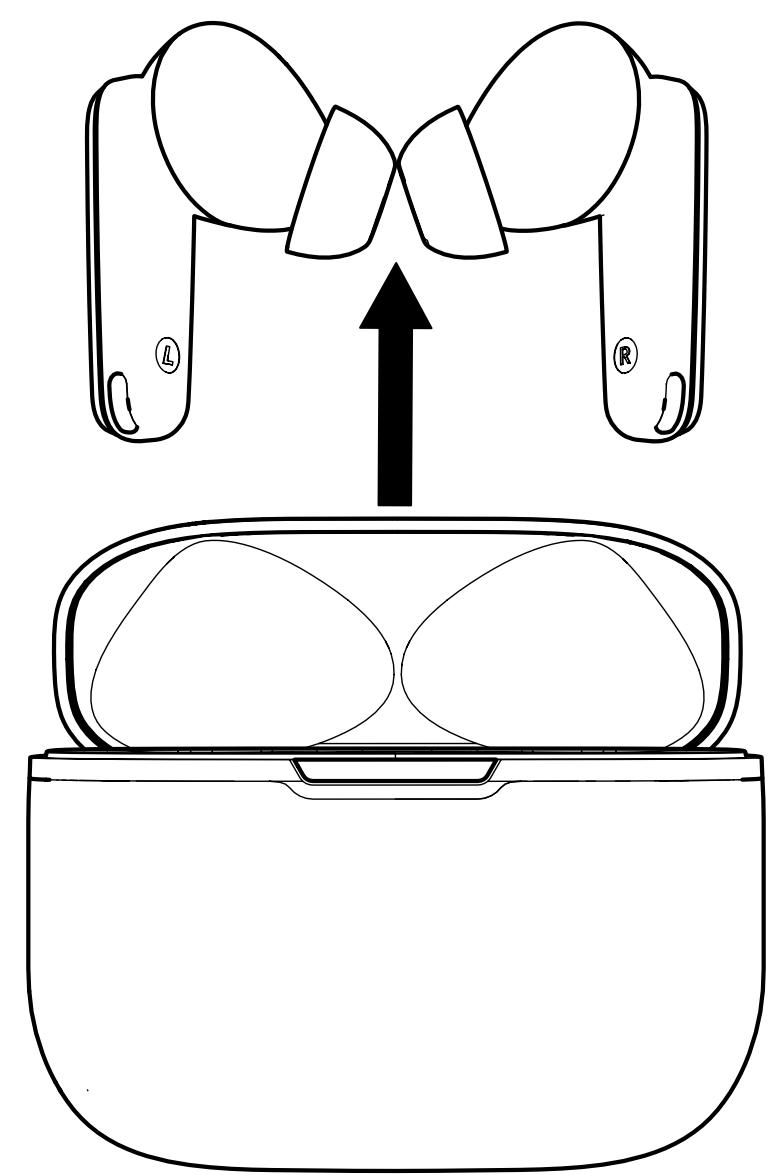

On your device, enable Bluetooth and search for “TWS3 KICKER” in the list of available devices. Select “TWS3 KICKER” to connect. A voice prompt will say “Connected” once paired.

 
Automatic Reconnection: The earbuds will automatically reconnect to the last paired device when removed from the case. If reconnection fails, manually select “TWS3 KICKER” from your audio device’s Bluetooth menu.

Pairing with a New Device: To connect the TWS3 earbuds to a different smartphone, tablet, or computer, first disconnect them from the current one, either by removing the TWS3 from the list of paired items, disabling Bluetooth, or powering it off. Once done, the TWS3 earbuds will automatically enter pairing mode, allowing you to connect to the new audio device.

Dual Earbud Pairing: The left and right earbuds are pre-linked and function as a matched set. This pairing is locked, meaning the earbuds cannot be paired with other non-TWS3 earbuds. If you experience syncing issues, refer to the Reset section. The TWS3 supports single-earbud use. Simply remove one earbud from the case for mono audio.

Controls and Operations

The TWS3 earbuds use intuitive touch controls on the earbud stems for managing audio, calls, and modes. Controls are responsive to taps and holds.

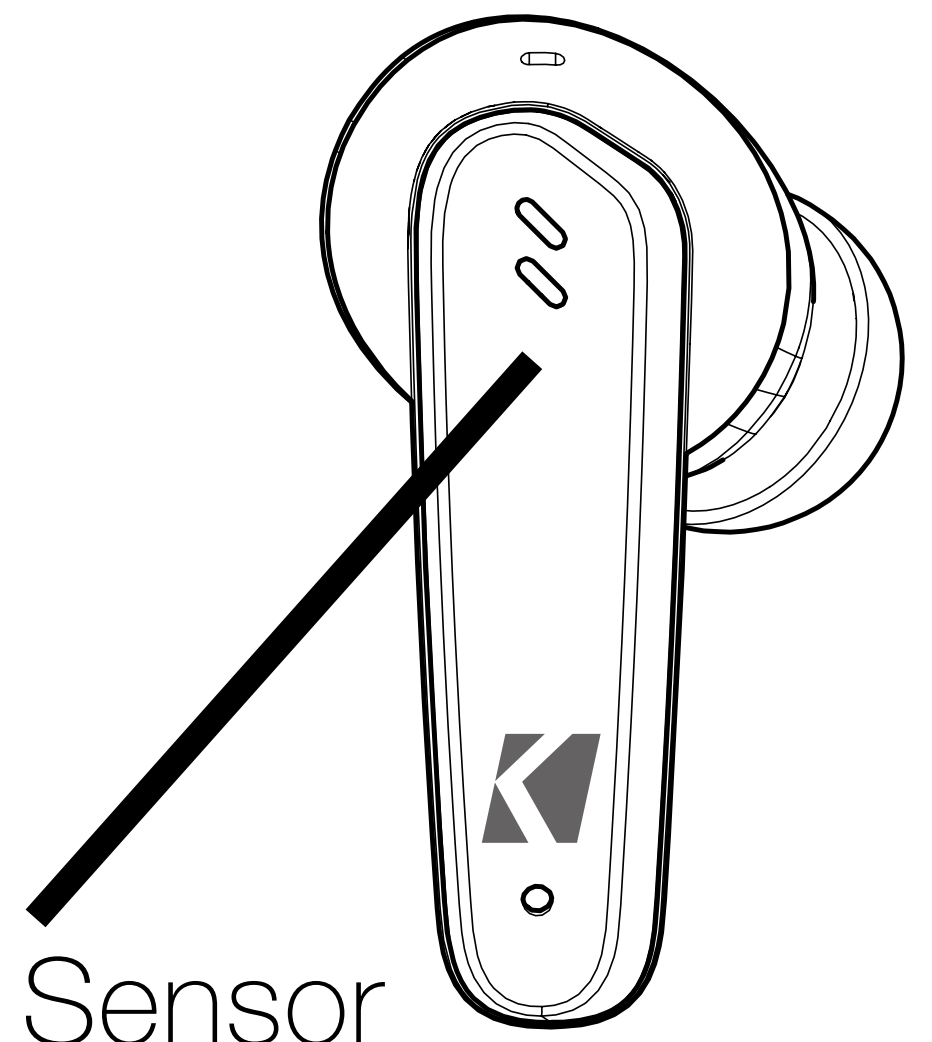

Basic Controls

Touch Sensor

Power On/Off: Earbuds automatically power on when removed from the case and power off when placed back in (with the lid closed). The earbuds will power off automatically after 5 minutes with no Bluetooth connection.

Play/Pause Music: Double-tap either earbud.

Next Track: Long Press the right earbud.

Previous Track: Long Press the left earbud.

Answer/End Call: Double-tap either earbud during an incoming or ongoing call.

Reject Call: Long Press either earbud during an incoming call.

Voice Assistant: Triple-tap the left earbud

ANC Modes: Triple-tap the right earbud to cycle through ANC ON > ANC OFF > Transparency.

ANC Modes

Active Noise Cancellation (ANC) reduces ambient noise for focused listening. Transparency mode allows ambient sounds to pass through utilizing the microphone, ideal to maintain safety and environmental awareness of your surroundings. ANC is only available when both earbuds are in use. ANC mode is on by default. *Battery usage is higher with ANC ON; switch to OFF for extended playtime.*

Switching Modes: Triple-tap the right earbud to cycle through modes: ANC ON > ANC OFF > Transparency Mode (and repeat).

ANC ON: Blocks low-frequency noises like traffic or airplane engines, enhancing immersion in music or podcasts.

ANC OFF: Disables noise cancellation to conserve battery or when natural sound is preferred.

Transparency Mode: Amplifies external sounds through built-in microphones, allowing you to hear announcements, traffic, or conversations without removing the earbuds.

ENC: Environmental Noise Cancellation (ENC) filters out background noise during calls for clearer transmission to the recipient of your call. ENC automatically engages during calls when both earbuds are in use, suppressing wind, crowd noise, or echoes for crystal-clear voice transmission.

Resetting the Earbuds

If you encounter connectivity issues, forgotten pairings, or syncing problems, resetting clears the device's memory.

Clearing Pairing Records: Ensure the earbuds are in pairing mode (open the case lid; lights should flash white).

Press and hold the touch area on both earbuds at the same time for 6 seconds. The red and white lights will blink, confirming the reset.

This action clears all paired device information from the earbuds' memory. The internal left-right earbud link remains locked and cannot be individually paired with other devices.

Troubleshooting

TWS3 is unresponsive or will not power on:

1. Check that the battery is fully charged by connecting the TWS3 Charging Case to a known-good power source with the TWS3 earbuds inside. Allow the TWS3 to charge for at least 2.5 hours with the Case Lid closed.
2. Reset the TWS3 by pressing and holding the touch sensor for 5 seconds.

TWS3 will not pair or connect:

1. If you have previously paired your device with the TWS3, then please 'Unpair' or 'Forget this Device' per the instructions for your audio device.
2. Turn on the TWS3 earbuds with your audio device in Bluetooth Scanning mode. Make sure your audio device is scanning or in 'discovery mode', then select TWS3 KICKER.

Device paired and connected, but volume is low or inaudible:

Check the volume output level of your audio device.

No Sound:

Ensure earbuds are charged and properly paired. Check device volume.

Connection Drops:

Move closer to your device or reset Bluetooth.

One Earbud Not Working:

Place both in the case, close the lid for 10 seconds, then reopen.

Warranty

KICKER products are warranted against defects. Duration and terms of warranty depend on the laws in the country in which it was purchased. For details see your local KICKER Dealer or **www.kicker.com/warranty**.

Los productos KICKER se encuentran cubiertos contra defectos. La duración y los términos de la garantía dependen de las leyes del país donde fueron adquiridos. Para más información, consulte a su distribuidor local de KICKER o visite: **www.kicker.com/warranty**.

Les produits KICKER sont garantis contre les défauts. La durée et les termes de la garantie dépendent des lois en vigueur dans le pays où l'achat a été effectué. Pour plus d'informations, veuillez contacter votre vendeur KICKER local ou vous rendre sur : **www.kicker.com/warranty**.

When purchased from an Authorized KICKER Dealer, KICKER warrants this product to be free from defects in material and workmanship under normal use for a period of ONE (1) YEAR from date of original purchase with receipt. If this product is identified as "Refurbished" or "B Goods", the warranty is limited to a period of THREE (3) MONTHS from the date of original purchase. In all cases you must have the original receipt. Should service be necessary under this warranty for any reason due to manufacturing defect or malfunction during the warranty period, KICKER will repair or replace (at its discretion) the defective merchandise with equivalent merchandise. Warranty replacements may have cosmetic scratches and blemishes. Discontinued products may be replaced with more current equivalent products. This warranty is valid only for the original purchaser and is not extended to owners of the product subsequent to the original purchaser. Any applicable implied warranties are limited in duration to a period of the express warranty as provided herein beginning with the date of the original purchase at retail, and no warranties, whether express or implied, shall apply to this product thereafter. Some states do not allow limitations on implied warranties; therefore, these exclusions may not apply to you. This warranty gives you specific legal rights; however you may have other rights that vary from state to state.

WHAT TO DO IF YOU NEED WARRANTY OR SERVICE:

Defective merchandise purchased through Amazon.com should be returned through Amazon.com. Defective merchandise purchased through Kicker.com should go through Stillwater Designs customer service at (405) 624-8510 for a Return Merchandise Authorization (RMA) number. Package only the defective items in a package that will prevent shipping damage, and return to:

Stillwater Designs

3100 North Husband St

Stillwater, OK 74075

The RMA number must be clearly marked on the outside of the package. Please return only defective components. The return of functioning items increases your return freight charges. Non-defective items will be returned freight collect to you. For example, if a subwoofer is defective, only return the defective subwoofer, not the entire enclosure. Include a copy of the original receipt with the purchase date clearly visible, and a "proof-of-purchase" statement listing the Customer's name, Dealer's name and invoice number, and product purchased. Warranty expiration on items without proof-of-purchase will be determined from the type of sale and manufacturing date code. Freight must be prepaid; items sent freight-collect, or COD, will be refused.

WHAT IS NOT COVERED?

This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover:

- o Damage due to improper installation
- o Subsequent damage to other components
- o Damage caused by exposure to moisture, excessive heat, chemical cleaners, and/or UV radiation
- o Damage through negligence, misuse, accident or abuse. Repeated returns for the same damage may be considered abuse
- o Any cost or expense related to the removal or reinstallation of product
- o Speakers damaged due to amplifier clipping or distortion
- o Items previously repaired or modified by any unauthorized repair facility
- o Return shipping on non-defective items
- o Products with tampered or missing barcode labels
- o Products with tampered or missing serial numbers
- o Products returned without a Return Merchandise Authorization (RMA) number
- o Products purchased from an UNAUTHORIZED dealer
- o Freight Damage
- o The cost of shipping product to KICKER
- o Service performed by anyone other than KICKER

HOW LONG WILL IT TAKE?

KICKER strives to maintain a goal of one-week service for all acoustics (subwoofers, midrange drivers, tweeters, crossovers, etc) returns. Delays may be incurred if lack of replacement inventory or parts is encountered. Failure to follow these steps may void your warranty. Any questions can be directed to the KICKER Customer Service Department at (405) 624-8510. Contact your International KICKER dealer or distributor concerning specific procedures for your country's warranty policies.

Int. Warranty | Garantía | Garantie

Contact your International KICKER dealer or distributor concerning specific procedures for your country's warranty policies.

Our goods come with guarantees that cannot be excluded under the **Australian Consumer Law**. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The phrase "Fuel for Livin' Loud" refers to the uncompromising quality and unyielding energy associated with KICKER car stereos and the fact that we encourage our customers to strive for the best ("Livin' Loud") in all aspects of their lives. KICKER loudspeakers and amplifiers are leaders in the mobile audio system market and are therefore the "fuel" for our customers' car stereo experience. We encourage all of our customers to follow local noise regulations regarding the permitted and appropriate volume levels outside the car.

GARANTÍA INTERNACIONAL **Versión Español**

Comuníquese con su concesionario o distribuidor KICKER internacional para obtener información sobre procedimientos específicos relacionados con las normas de garantía de su país.

La frase "combustible para vivir la vida Livin' Loud™ a todo volumen" se refiere al entusiasmo por la vida que la marca KICKER de estéreos de automóvil representa y a la recomendación a nuestros clientes de que vivan lo mejor posible ("a todo volumen") en todo sentido. La línea de altavoces y amplificadores KICKER es la mejor del mercado de audio de automóviles y por lo tanto representa el "combustible" para vivir a todo volumen en el área de "estéreos de automóvil" de la vida de nuestros clientes. Recomendamos a todos nuestros clientes que obedezcan todas las reglas y reglamentos locales sobre ruido en cuanto a los niveles legales y apropiados de audición fuera del vehículo.

GARANTIE INTERNATIONALE **Version cc**

Pour connaître les procédures propres à la politique de garantie de votre pays, contactez votre revendeur ou distributeur International KICKER.

L'expression "carburant pour vivre plein pot" fait référence au dynamisme de la marque KICKER d'équipements audio pour véhicules et a pour but d'encourager nos clients à faire le maximum ("vivre plein pot") dans tous les aspects de leur vie. Les haut-parleurs et amplificateurs KICKER sont les meilleurs dans le domaine des équipements audio et représentent donc pour nos clients le "carburant pour vivre plein pot" dans l'aspect "installation audio de véhicule" de leur vie. Nous encourageons tous nos clients à respecter toutes les lois et réglementations locales relatives aux niveaux sonores acceptables à l'extérieur des véhicules.

INTERNATIONALE GARANTIE **Deutsche Version**

Nehmen Sie mit Ihren internationalen KICKER-Fachhändler oder Vertrieb Kontakt auf, um Details über die Garantieleistungen in Ihrem Land zu erfahren.

Der Slogan "Treibstoff für Livin' Loud" bezieht sich auf die mit den KICKER-Autostereosystemen assoziierte Lebensfreude und die Tatsache, dass wir unsere Kunden ermutigen, in allen Aspekten ihres Lebens nach dem Besten ("Livin' Loud") zu streben. Die Lautsprecher und Verstärker von KICKER sind auf dem Markt für Auto-Soundsysteme führend und stellen somit den "Treibstoff" für das Autostereoerlebnis unserer Kunden dar. Wir empfehlen allen unseren Kunden, sich bezüglich der zugelassenen und passenden Lautstärkepegel außerhalb des Autos an die örtlichen Lärmvorschriften zu halten.



P.O. Box 459
Stillwater, Oklahoma 74076
USA
(405) 624-8510